


# Parts List

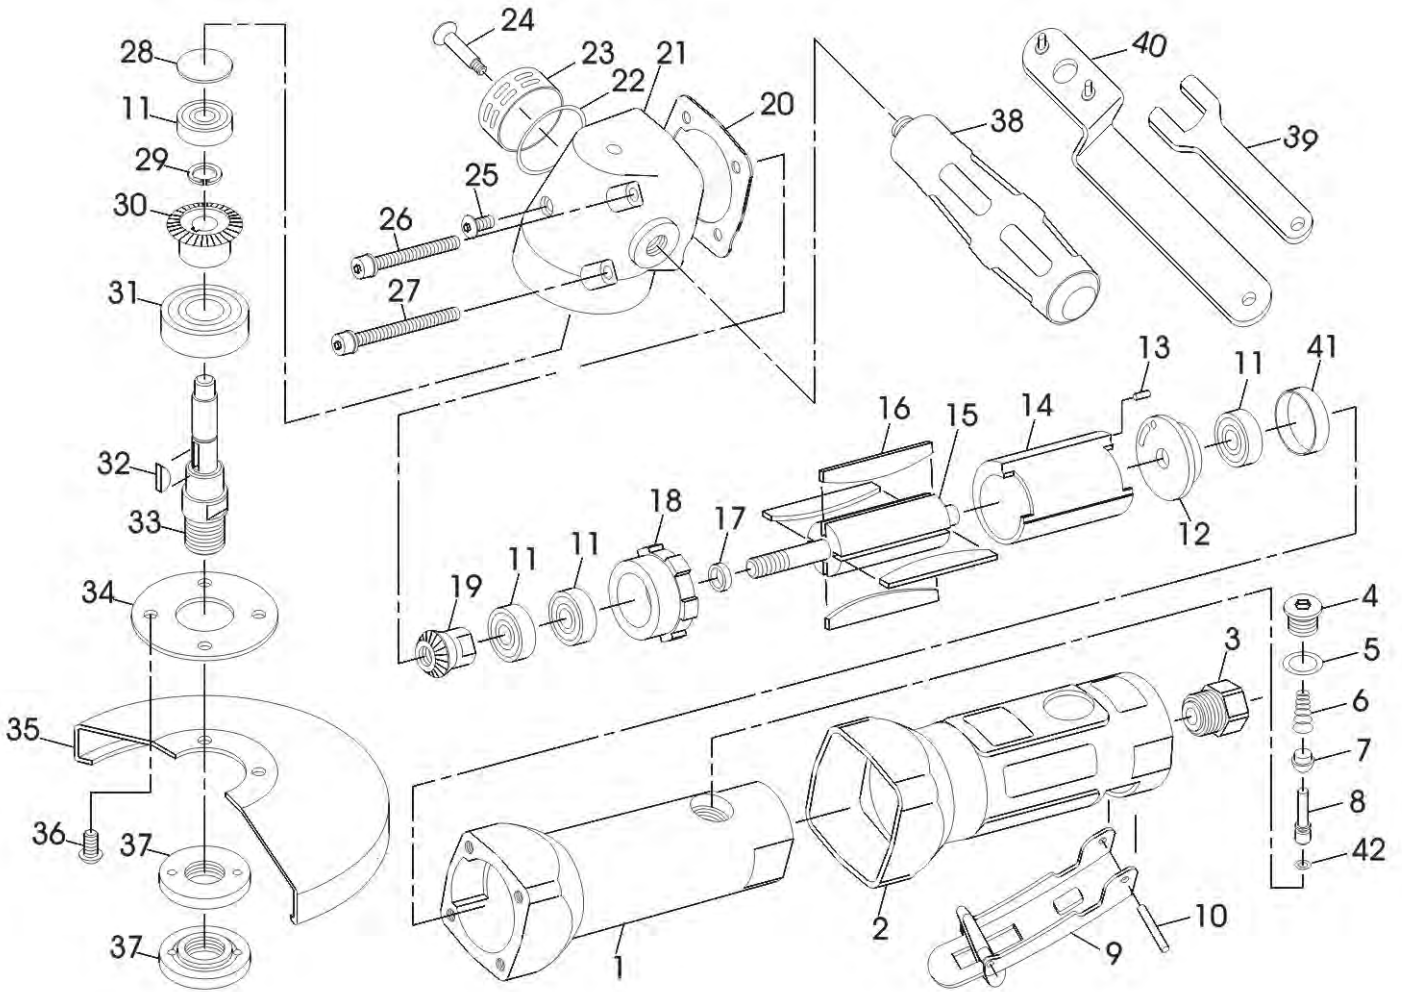

Part No.	Description	Q'ty	Part No.	Description	Q'ty
1	Housing	1	22	O-Ring	1
2	Rubber	1	23	Exhaust Sleeve	1
3	Air Inlet	1	24	Screw	1
4	Screw	1	25	Screw	1
5	O-Ring	1	26	Screw (M5 x 45L)	2
6	Spring	1	27	Screw (M5 x 55L)	2
7	Valve Stem Bushing	1	28	Spacer	1
8	Valve Stem	1	29	Retaining Ring	1
9	Lever	1	30	Bevel Gear	1
10	Pin	1	31	Bearing	1
11	Bearing	4	32	Key	1
12	Bear Plate	1	33	Shaft	1
13	Pin	1	34	Face Plate	1
14	Cylinder	1	35	Disc Cover	1
15	Rotor	1	36	Screw	4
16	Rotor Blade	4	37	Disc Nut	2
17	Bearing Spacer	1	38	Handle	1
18	Front Plate	1	39	Stop Panner (12M/M)	1
19	Bevel Gear	1	40	Wrench	1
20	Packing	1	41	Shroud	1
21	Angle Housing	1	42	O-Ring	1

\* We reserve the right for any designing to the parts and without any noticement in advance.