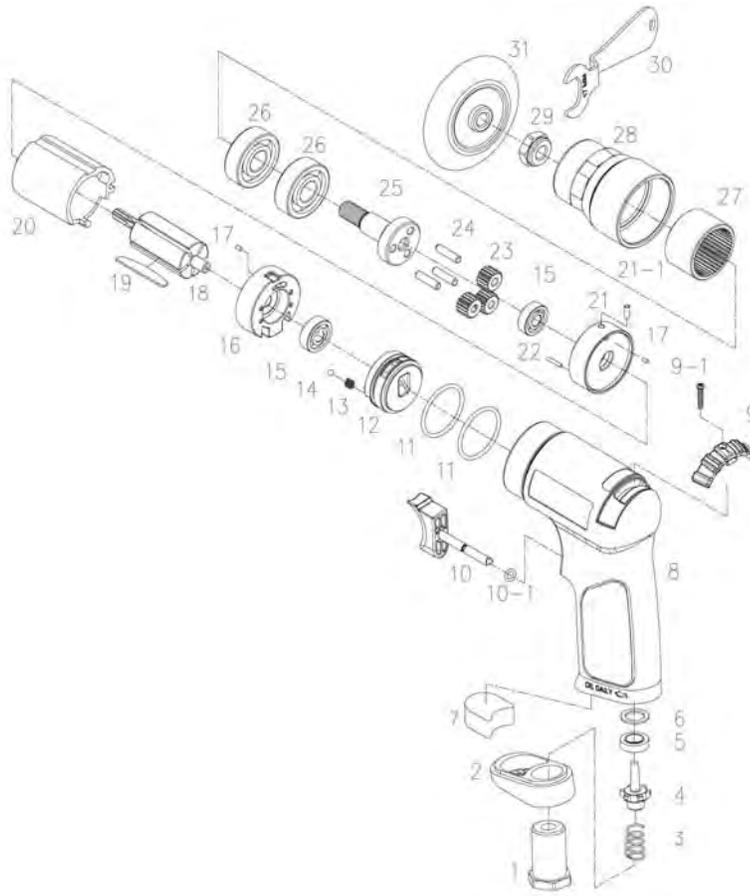


Parts List

Part No.	Description	QTY	Part No.	Description	QTY
1	Inlet Bushing	1	16	Rear Plate	1
2	Deflector	1	17	Spring Pin	2
3	Valve Spring	1	18	Rotor	1
4	Valve	1	19	Rotor Blade	5
5	Valve Seat	1	20	Cylinder	1
6	Spacer	1	21	Front Plate	1
7	Silencer	1	21-1	Spring Pin	1
8	Composite Housing	1	22	Pin	1
9	Reverse Valve Lever	1	23	Idle Gear	3
9-1	Screw	1	24	Pin	3
10	Trigger	1	25	Spindle	1
10-1	O-Ring	1	26	Ball Bearing	2
11	O-Ring	2	27	Ring Gear	1
12	Valve Body	1	28	Front Housing	1
13	Spring	1	29	Spindle Nut	1
14	Detent Ball	1	30	Wrench	1
15	Ball Bearing	2	31	Pad	1