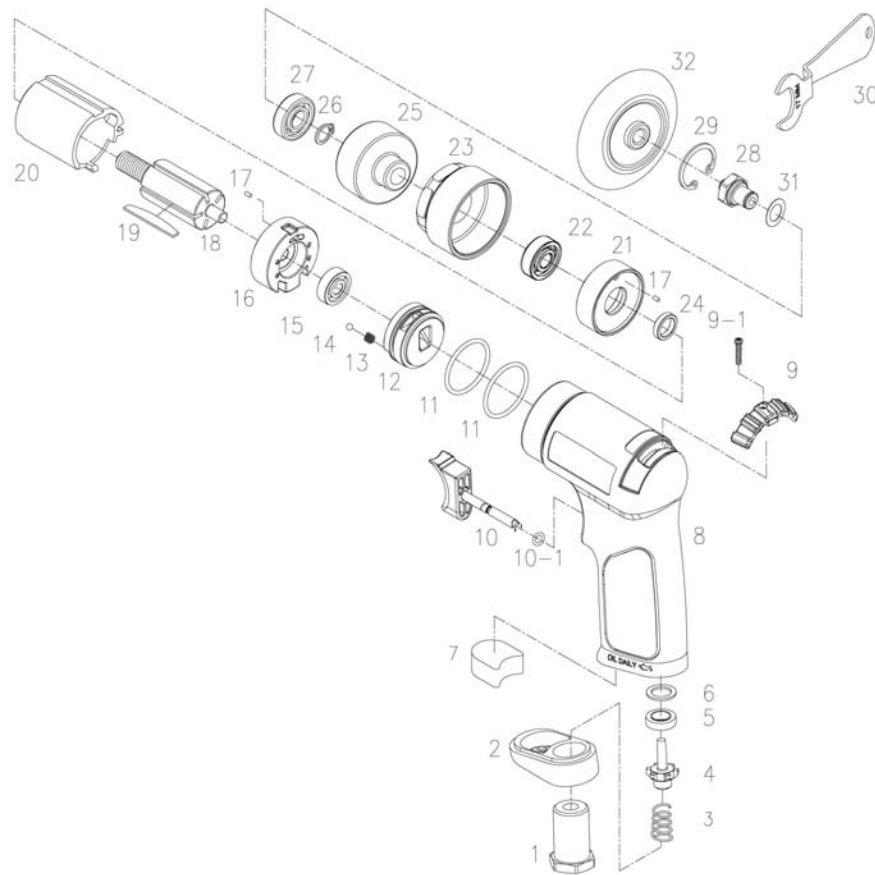


Parts List

Part No.	Description	QTY	Part No.	Description	QTY
1	Inlet Bushing	1	16	Rear Plate	1
2	Deflector	1	17	Spring Pin	2
3	Valve Spring	1	18	Rotor	1
4	Valve	1	19	Rotor Blade	5
5	Valve Seat	1	20	Cylinder	1
6	Spacer	1	21	Front Plate	1
7	Silencer	1	22	Ball Bearing	1
8	Composite Housing	1	23	Front Housing	1
9	Reverse Valve Lever	1	24	Anvil Bushing	1
9-1	Screw	1	25	Eccentric Hub	1
10	Trigger	1	26	Retainer	1
10-1	O-Ring	1	27	Ball Bearing	1
11	O-Ring	2	28	Spindle	1
12	Valve Body	1	29	Retainer	1
13	Spring	1	30	Wrench	1
14	Detent Ball	1	31	Washer	1
15	Ball Bearing	1	32	Pad	1