


# DELPHI WEATHER PACK TERMINAL RATCHETING CRIMPER KIT

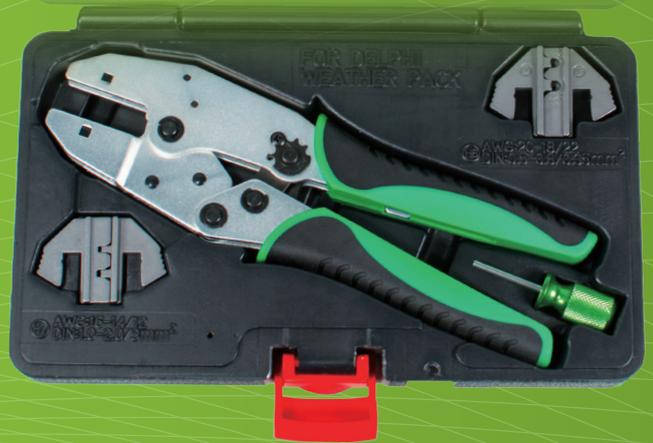

Adjustable

Quick Release



**H6**



For Delphi Weather Pack Terminal



**AWG 22/20-18**  
0.35/0.5-0.8 mm<sup>2</sup>



**H7**



For Delphi Weather Pack Terminal



**AWG 16-14/12**  
1.0-2.0/3.0 mm<sup>2</sup>




## WHERE TO USE





# HOW TO ASSEMBLE WEATHER PACK CONNECTORS

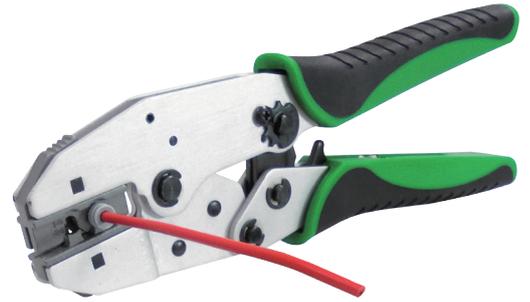

**1**  
Load seal onto stripped wire  
(wire stripped 5.0mm or 3/16")




**2**  
Terminal, seal and wire  
(positioned to be crimped)



**3**  
Crimped Weather Pack  
Terminal & seal



**4**  
Insert crimped Weather Pack  
Terminal into connector  
housing.

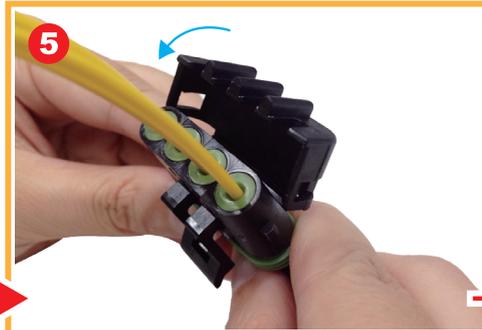

**5**  
Once all terminals are inserted,  
lock wire and seals as shown  
above.



**6**  
Connect together until locked.

# HOW TO REMOVE TERMINALS FROM HOUSINGS

